

BLIND HOLE CLEANING SYSTEM INSTALLATION & MAINTENANCE

INSTALLATION AND USE

- 1. Connect Blind Hole Cleaning Gun to airline. Use clean filtered compressed air.
- 2. MAXIMUM pressure used should be no more than 100 PSIG (6 bar)
- 3. Press trigger ONLY when the hole adaptor fully covers the hole being cleaned.
- 4. Empty bag at regular intervals.

Maintenance of Unit and Changing of Hole Adaptor and Nozzle

- 1. Disconnect airline
- 2. Use Allen key to loosen grub screws of hole adaptor.
- 3. Hold handle end in a vice and use spanner to loosen nozzle.
- 4. Change nozzle as required and tighten with spanner. Do not over tighten or it will spoil threads.
- 5 Fit adaptor in same plane as handle to align with flats on the nozzle end.
- 6. Tighten firmly with an Allen key
- 7. Ensure bag is zipped and clamped tight to the adaptor exit.8
- 8 To remove dirt use gloves and open bag zip.
- 9. Empty bag at regular intervals.